



检测报告

Test Report

送检企业: 安徽金源工程检测有限公司

样品名称: 给水用聚乙烯 (PE) 管材

检验类别: 委托检验



厦门泓益检测有限公司

Xiamen Hongyi Testing Technology Co.Ltd

This report shall not be altered, increased or deleted. The results shown in this test report refer only to the sample(s) tested. Without written approval of Hongyi Testing, this test report shall not be copied except in full and published as advertisement Hongyi Physical & Chemical Lab.

厦门泓益检测有限公司

Xiamen Hongyi Testing Co., Ltd.

地址: 福建省厦门市同安区轻工食品工业区美禾路 99 号

ADDRESS: No. 99 Meihe Road, Light Industry Food Industrial Zone, Tongan District, Xiamen City, Fujian Province,

邮箱: hongyotest@123.com




报告编号: HYI20250428A1236

样品名称	:	给水用聚乙烯 (PE) 管材	见证人	:	胡自亮
型号规格	:	dn200×11.9 SDR17 PE100	样品数量	:	9 pcs
委托单位	:	安徽金源工程检测有限公司			
工程名称	:	肥西县严店镇高标准农田建设项目			
建设单位	:	合肥农丰建设投资有限公司			
见证单位	:	安徽凯瑞水利水电工程咨询有限公司			
施工单位	:	安徽巢湖水利电力建设集团有限公司			
生产单位	:	安徽万安环境科技股份有限公司			
检验类别	:	委托检验	测试日期	:	2025 年 04 月 23 日-2025 年 04 月 28 日
签发日期	:	2025 年 04 月 28 日			
检验依据	:	依照客户指定标准			
检验项目	:	见后续			
样品特征和状态	:	完好			
环境温度	:	24.6℃	环境湿度	:	63.8%
测试结果	:	本次委托检验, 所检项目全部符合标准要求			

报告编制: 张华伟

报告审核: 杨泽群

报告签发: 胡自亮

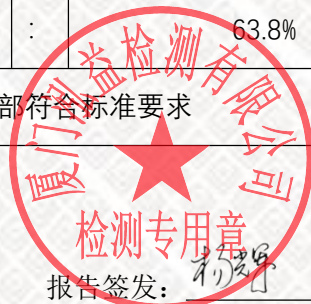

This report shall not be altered, increased or deleted. The results shown in this test report refer only to the sample(s) tested. Without written approval of Hongyi Testing, this test report shall not be copied except in full and published as advertisement Hongyi Physical & Chemical Lab.



报告编号: HYI20250428A1236

检测结果:

序号	检验项目名称	技术要求	检验结果	单项判定
1	外观	管材内外表面应清洁、光滑, 不应有气泡、明显的划伤、凹陷、杂质、颜色不均等缺陷。管材两端应切割平整, 并与管材轴线垂直。	试样均符合	合格
2	管材尺寸, mm	见以下二项	见以下二项	合格
2.1	平均外径	200.0 ~ 201.2	200.5	合格
2.2	公称壁厚	11.9 ~ 13.2	12.1	合格
3	纵向回缩率, %	≤3	1.9	合格
4	断裂伸长率, %	≥350	456	合格
5	静液压强度 (20℃、100h、环应力 12.0MPa)	无破坏, 无渗漏	无破坏, 无渗漏	合格
以下空白				

This report shall not be altered, increased or deleted. The results shown in this test report refer only to the sample(s) tested. Without written approval of Hongyi Testing, this test report shall not be copied except in full and published as advertisement Hongyi Physical & Chemical Lab.





注意事项:

1. 报告无“检验报告章”或检验单位公章无效。
2. 未经本实验室书面同意,不得部分复制本报告。
3. 报告无主检、审核、批准人签字无效。
4. 报告涂改无效。
5. 对检测报告若有异议,应于收到报告之日起十五日内向检测单位提出,逾期不予受理。
6. 委托检测仅对来样负责。

地址:福建省厦门市同安区轻工食品工业区美禾路 99 号

Add: No. 99 Meihe Road, Light Industry Food Industrial Zone, Tongan District, Xiamen City, Fujian Province,

This report shall not be altered, increased or deleted. The results shown in this test report refer only to the sample(s) tested. Without written approval of Hongyi Testing, this test report shall not be copied except in full and published as advertisement Hongyi Physical & Chemical Lab.

厦门泓益检测有限公司

Xiamen Hongyi Testing Co., Ltd.

地址:福建省厦门市同安区轻工食品工业区美禾路 99 号

ADDRESS: No. 99 Meihe Road, Light Industry Food Industrial Zone, Tongan District, Xiamen City, Fujian Province,

邮箱: hongyotest@123.com





报告结束

有限公司

This report shall not be altered, increased or deleted. The results shown in this test report refer only to the sample(s) tested. Without written approval of Hongyi Testing, this test report shall not be copied except in full and published as advertisement Hongyi Physical & Chemical Lab.