



检测报告

Test Report

送检企业: 江苏晟宇地板有限公司

样品名称: 减振降噪实木复合地板

检验类别: 委托检验

厦门泓益检测有限公司

Xiamen Hongyi Testing Technology Co. Ltd

This report shall not be altered, increased or deleted. The results shown in this test report refer only to the sample(s) tested. Without written approval of Hongyi Testing, this test report shall not be copied except in full and published as advertisement Hongyi Physical & Chemical Lab.

厦门泓益检测有限公司
Xiamen Hongyi Testing Co., Ltd.

地址: 福建省厦门市同安区轻工食品工业区美禾路 99 号

ADDRESS: No. 99 Meihe Road, Light Industry Food Industrial Zone, Tongan District, Xiamen City, Fujian Province,

邮箱: hongyotest@123.com



报告编号: HYI20250329A1020

样品名称	: 减振降噪实木复合地板	型号规格	: /
商标	: /	样品数量	: 5 pcs
委托单位	: 江苏晟宇地板有限公司		
委托单位地址	: 江苏宿迁市泗阳县众兴工业园发展大道北侧、何庄路东侧		
生产单位	: 江苏晟宇地板有限公司		
生产单位地址	: 江苏宿迁市泗阳县众兴工业园发展大道北侧、何庄路东侧		
检验类别	: 委托检验	测试日期	: 2025年03月18日-2025年03月29日
签发日期	: 2025年03月29日		
检验依据	: GB/T 24507-2020《浸渍纸层压板饰面多层实木复合地板》 GB/T 18103-2013《实木复合地板》 GB 18580-2017《室内装饰装修材料 人造板及其制品中甲醛释放限量》		
检验项目	: 见后续		
样品特征和状态	: 完好		
环境温度	: 24.6℃	环境湿度	: 63.8%
测试结果	: 本次委托检验, 所检项目全部符合标准要求		

报告编制: 张华伟

报告审核: 杨泽群



This report shall not be altered, increased or deleted. The results shown in this test report refer only to the sample(s) tested. Without written approval of Hongyi Testing, this test report shall not be copied except in full and published as advertisement Hongyi Physical & Chemical Lab.



检测报告

序号	项目	指 标	试验方法	测试结果	单项判定	
1	甲醛释放量	$E1 \leq 0.124 \text{mg/m}^3$	GB 18580	0.01mg/m^3	合格	
2	含水率	5%-16%	GB/T 9846	12%	合格	
3	胶合强度	$\geq 0.7 \text{MPa}$	GB/T 9846	0.9MPa	合格	
4	纤维平均直径/ μm	≤ 7	GB/T 25975	$6.2 \mu\text{m}$	合格	
5	渣球含量/% (粒径大 0.25mm)	≤ 10.0	GB/T 25975	9.1	合格	
6	密度/ kg/m^3	101-160 (允许偏差 $\pm 15\%$)	GB/T 25975	117.7	合格	
7	热荷重收缩温度 / $^{\circ}\text{C}$	≥ 600	GB/T 25975	650	合格	
8	质量吸湿率/%	≤ 1.0	GB/T 25975	0.87	合格	
9	憎水率/%	≥ 98.0	GB/T 25975	99.2	合格	
10	导热系数/ $\text{W/m} \cdot \text{K}$ (平均温度 25°C)	≤ 0.040	GB/T 25975	0.0342	合格	
11	垂直于表面的抗拉 强度/kPa	≥ 10	GB/T 25975	10.3	合格	
12	压缩强度/kPa	≥ 40	GB/T 25975	40.3	合格	
13	尺寸稳 定性	长度/%	≤ 1	GB/T 25975	0.71	合格
		宽度/%	≤ 1	GB/T 25975	0.49	合格
		厚度/%	≤ 1	GB/T 25975	0.47	合格

This report shall not be altered, increased or deleted. The results shown in this test report refer only to the sample(s) tested. Without written approval of Hongyi Testing, this test report shall not be copied except in full and published as advertisement Hongyi Physical & Chemical Lab.



报告编号: HYI20250329A1020


14	阻燃性能	GB20286-2006 阻燃 1 级	符合	合格
		续燃时间: $\leq 5s$	符合	合格
		阴燃时间: $\leq 5s$	符合	合格
		损毁长度: $\leq 150mm$	符合	合格
		氧指数: $\geq 32.0\%$	符合	合格
		燃烧滴落物: 未引起脱脂棉燃烧或阴燃	符合	合格
		烟密度 $\leq 15SDR$	符合	合格
		产烟毒性等级不低于 ZA2 级	符合	合格
以下空白				

This report shall not be altered, increased or deleted. The results shown in this test report refer only to the sample(s) tested. Without written approval of Hongyi Testing, this test report shall not be copied except in full and published as advertisement Hongyi Physical & Chemical Lab.





样品照片

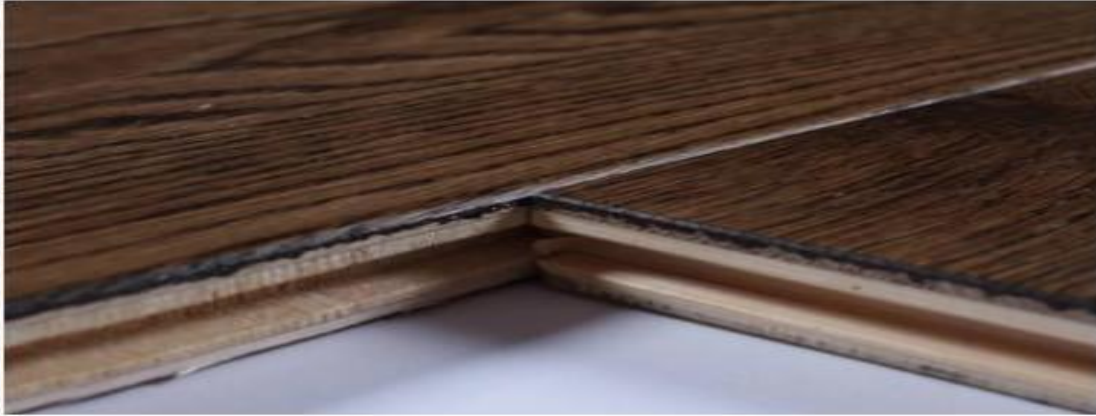

This report shall not be altered, increased or deleted. The results shown in this test report refer only to the sample(s) tested. Without written approval of Hongyi Testing, this test report shall not be copied except in full and published as advertisement Hongyi Physical & Chemical Lab.

厦门泓益检测有限公司

Xiamen Hongyi Testing Co., Ltd.

地址: 福建省厦门市同安区轻工食品工业区美禾路 99 号

ADDRESS: No. 99 Meihe Road, Light Industry Food Industrial Zone, Tongan District, Xiamen City, Fujian Province,

邮箱: hongyotest@123.com



检测公司章

This report shall not be altered, increased or deleted. The results shown in this test report refer only to the sample(s) tested. Without written approval of Hongyi Testing, this test report shall not be copied except in full and published as advertisement Hongyi Physical & Chemical Lab.



注意事项:

1. 报告无“检验报告章”或检验单位公章无效。
2. 未经本实验室书面同意,不得部分复制本报告。
3. 报告无主检、审核、批准人签字无效。
4. 报告涂改无效。
5. 对检测报告若有异议,应于收到报告之日起十五日内向检测单位提出,逾期不予受理。
6. 委托检测仪对来样负责。

地址:福建省厦门市同安区轻工食品工业区美禾路 99 号

Add: No. 99 Meihe Road, Light Industry Food Industrial Zone, Tongan District, Xiamen City, Fujian Province,

报告结束

This report shall not be altered, increased or deleted. The results shown in this test report refer only to the sample(s) tested. Without written approval of Hongyi Testing, this test report shall not be copied except in full and published as advertisement Hongyi Physical & Chemical Lab.

厦门泓益检测有限公司
Xiamen Hongyi Testing Co., Ltd.

地址:福建省厦门市同安区轻工食品工业区美禾路 99 号

ADDRESS: No. 99 Meihe Road, Light Industry Food Industrial Zone, Tongan District, Xiamen City, Fujian Province,

邮箱: hongyotest@123.com