



检测报告

Test Report

委托单位: 上海帜科机电设备工程有限公司

受检单位: 上海帜科机电设备工程有限公司

采样地址: 上海市奉贤区张翁庙路 699 弄 9 号

检测类型: 工业企业厂界环境噪声

报告日期: 2026 年 03 月 05 日

厦门泓益检测有限公司

Xiamen Hongyi Testing Technology Co.Ltd

This report shall not be altered, increased or deleted. The results shown in this test report refer only to the sample(s) tested. Without written approval of Hongyi Testing, this test report shall not be copied except in full and published as advertisement Hongyi Physical & Chemical Lab.

厦门泓益检测有限公司
Xiamen Hongyi Testing Co., Ltd.

地址: 福建省厦门市同安区轻工食品工业区美禾路 99 号

ADDRESS: No. 99 Meihe Road, Light Industry Food Industrial Zone, Tongan District, Xiamen City, Fujian Province,

邮箱: hongyotest@123.com



报告编号: HYI20260305A1254

检测类型	工业企业厂界环境噪声	样品获取方式	现场采样
委托方联系人	盛经理	联系电话	13621882908
采样日期	2026 年 02 月 25 日	检测日期	2026 年 03 月 05 日
采样人员	袁斌、王飞		
采样依据	GB 12348-2008《工业企业厂界环境噪声排放标准》 HJ 706-2014《环境噪声监测技术规范噪声测量值修正》		
评价依据	GB 12348-2008《工业企业厂界环境噪声排放标准》2 类 GB/T 15190-2014《声环境功能区划分技术规范》 《上海市声环境功能区划(2019 年修订版)》		
检测项目	检测方法	仪器名称及型号	仪器编号
工业企业厂界环境噪声	GB 12348-2008 《工业企业厂界环境噪声排放标准》	多功能声级计 AWA6228+	SKB-SB-129
		声校准器 AWA6221A	SKB-SB-091
		轻便三杯风向风速表 FYF-1	SKB-SB-171
天气情况	昼间：晴		
备注	/		

报告编制:

张华伟

报告审核:

杨泽群

报告签发:

检测专用章

This report shall not be altered, increased or deleted. The results shown in this test report refer only to the sample(s) tested. Without written approval of Hongyi Testing, this test report shall not be copied except in full and published as advertisement Hongyi Physical & Chemical Lab.

厦门泓益检测有限公司

Xiamen Hongyi Testing Co., Ltd.

地址: 福建省厦门市同安区轻工食品工业区美禾路 99 号

ADDRESS: No. 99 Meihe Road, Light Industry Food Industrial Zone, Tongan District, Xiamen City, Fujian Province,

邮箱: hongyotest@123.com



报告编号: HYI20260305A1254

噪声检测结果一览表(检测日期: 2026 年 02 月 25 日)

测点 编号	检测点位置	主要 噪声源	检测 时段	修正风速 (m/s)	检测结果 Leq [dB(A)]				排放限值 [dB(A)]
					实 测 值	背 景 值	修 正 值	修 约 值	
▲N1#	厂界东侧外 1 米，距 北厂界约 5 米处	环境 噪声	昼间 14:00~ 14:10	1.2	53.1	/	/	53	65
▲N2#	厂界南侧外 1 米，距 东厂界约 15 米处	邻厂 噪声	昼间 15:15~ 15:20	1.2	63.1	/	/	63	65
▲N3#	厂界西侧外 1 米，距 南厂界约 5 米处	环境 噪声	昼间 16:30~ 16:40	1.3	50.2	/	/	50	65
▲N4#	厂界北侧外 1 米，距 西厂界约 15 米处	环境 噪声	昼间 17:55~ 18:00	1.2	46.2	/	/	46	65
区域功能类别		3 类	校准器最新校准值：94.0dB/1000HZ 检测前校准值：93.8dB/1000HZ 检测后校准值：93.9dB/1000HZ						
工况描述		正常生产							
声源情况		非稳态噪声							
噪声源开启情况		/							
备注		/							

This report shall not be altered, increased or deleted. The results shown in this test report refer only to the sample(s) tested. Without written approval of Hongyi Testing, this test report shall not be copied except in full and published as advertisement Hongyi Physical & Chemical Lab.

厦门泓益检测有限公司

Xiamen Hongyi Testing Co., Ltd.

地址: 福建省厦门市同安区轻工食品工业区美禾路 99 号

ADDRESS: No. 99 Meihe Road, Light Industry Food Industrial Zone, Tongan District, Xiamen City, Fujian Province,

邮箱: hongyotest@123.com




报告编号: HYI20260305A1254

附表: 质控信息

表 1: 噪声质控

质控样	校准值 dB	
声校准器	昼	
	检测前	检测后
	93.8	93.9
	-0.1	
评判指标	± 0.5	

附图: 检测点位示意图

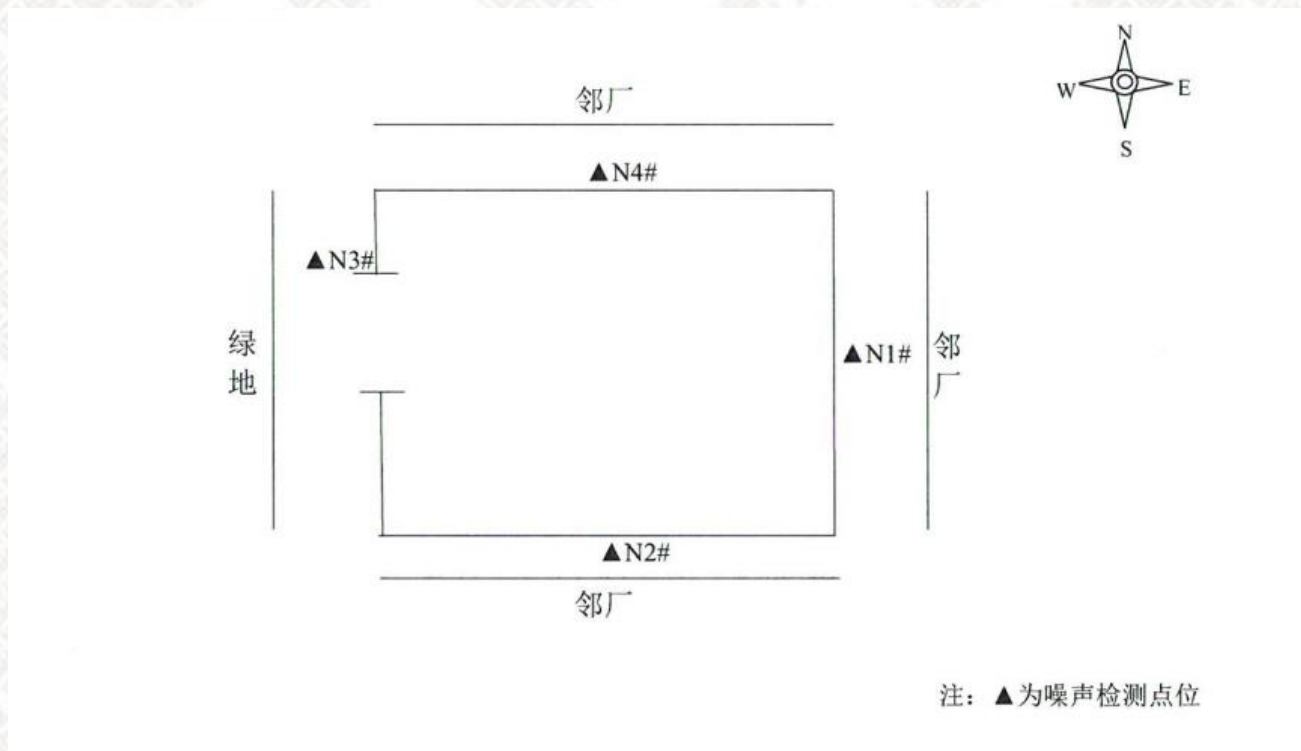

This report shall not be altered, increased or deleted. The results shown in this test report refer only to the sample(s) tested. Without written approval of Hongyi Testing, this test report shall not be copied except in full and published as advertisement Hongyi Physical & Chemical Lab.

厦门泓益检测有限公司

Xiamen Hongyi Testing Co., Ltd.

地址: 福建省厦门市同安区轻工食品工业区美禾路 99 号

ADDRESS: No. 99 Meihe Road, Light Industry Food Industrial Zone, Tongan District, Xiamen City, Fujian Province,

邮箱: hongyotest@123.com



注 意 事 项:

1. 报告无“检验报告章”或检验单位公章无效。
2. 未经本实验室书面同意,不得部分复制本报告。
3. 报告无主检、审核、批准人签字无效。
4. 报告涂改无效。
5. 对检测报告若有异议,应于收到报告之日起十五日内向检测单位提出,逾期不予受理。
6. 委托检测仪对来样负责。

地址: 福建省厦门市同安区轻工食品工业区美禾路 99 号

Add: No. 99 Meihe Road, Light Industry Food Industrial Zone, Tongan District, Xiamen City, Fujian Province,

报告结束

This report shall not be altered, increased or deleted. The results shown in this test report refer only to the sample(s) tested. Without written approval of Hongyi Testing, this test report shall not be copied except in full and published as advertisement Hongyi Physical & Chemical Lab.

厦门泓益检测有限公司
Xiamen Hongyi Testing Co., Ltd.

地址: 福建省厦门市同安区轻工食品工业区美禾路 99 号

ADDRESS: No. 99 Meihe Road, Light Industry Food Industrial Zone, Tongan District, Xiamen City, Fujian Province,

邮箱: hongyotest@123.com