



检测报告

Test Report

委托单位: 上海帜科机电设备工程有限公司

受检单位: 上海帜科机电设备工程有限公司

采样地址: 上海市奉贤区张翁庙路 699 弄 9 号

检测类型: 废 水

报告日期: 2026 年 03 月 05 日

厦门泓益检测有限公司

Xiamen Hongyi Testing Technology Co.Ltd

This report shall not be altered, increased or deleted. The results shown in this test report refer only to the sample(s) tested. Without written approval of Hongyi Testing, this test report shall not be copied except in full and published as advertisement Hongyi Physical & Chemical Lab.

厦门泓益检测有限公司

Xiamen Hongyi Testing Co., Ltd.

地址: 福建省厦门市同安区轻工食品工业区美禾路 99 号

ADDRESS: No. 99 Meihe Road, Light Industry Food Industrial Zone, Tongan District, Xiamen City, Fujian Province,

邮箱: hongyotest@123.com



检测类型	废水	样品获取方式	现场采样	
委托方联系人	盛经理	联系电话	13621882908	
采样日期	2026 年 02 月 25 日	检测日期	2026 年 02 月 25 日～03 月 05 日	
采样人员	袁斌、曲丽娜			
采样依据	HJ 91.1-2019 《污水监测技术规范》			
评价依据	DB 31/199-2018 《污水综合排放标准》			
检测项目	检测方法	仪器名称及型号	仪器编号	检出限
pH 值	HJ 1147-2020 《水质 pH 值的测定电极法》	便携式 pH 计 PHBJ-260F	SKB-SB-228	/
化学需氧量	HJ 828-2017 《水质化学需氧量的测定 重铬酸盐法》	塑料活塞滴定管 50mL 白	SKB-BL-071	4 mg/L
		COD 标准消解器 JC-102 (12)	SKB-SB-143	
五日生化需氧量 (BOD ₅)	HJ 505-2009 《水质五日生化需氧量(BOD ₅) 的 测定稀释与接种法》	生化培养箱 LRH-250	SKB-SB-017	0.5 mg/L
		溶解氧测定仪 JPSJ-605	SKB-SB-063	
悬浮物	GB/T 11901-1989 《水质悬浮物的测定重量法》	电子天平 BSA124S	SKB-SB-058	/
氨氮	HJ 535-2009 《水质氨氮的测定纳氏试 剂分光光度法》	紫外-可见分光光 度计 UV-1900	SKB-SB-011	0.025 mg/L
备注	/			

报告编制: 张华伟

报告审核: 杨群

报告签发: 杨群

检测专用章

This report shall not be altered, increased or deleted. The results shown in this test report refer only to the sample(s) tested. Without written approval of Hongyi Testing, this test report shall not be copied except in full and published as advertisement Hongyi Physical & Chemical Lab.

厦门泓益检测有限公司
Xiamen Hongyi Testing Co., Ltd.

地址: 福建省厦门市同安区轻工食品工业区美禾路 99 号

ADDRESS: No. 99 Meihe Road, Light Industry Food Industrial Zone, Tongan District, Xiamen City, Fujian Province,

邮箱: hongyotest@123.com



废水检测结果一览表

采样日期	检测项目	单位	检测结果			排放限值
			废水排放口			
2026. 02. 25	采样时间	—	11： 00	14:00	16:00	—
	采样频次	—	1	2	3	—
	样品编号	—	1	2	3	—
	pH 值	无量纲	8. 5	8. 6	8. 6	6~9
	化学需氧量	mg/L	35	36	36	500
	五日生化需氧量 (BOD ₅)	mg/L	11	12	12	300
	悬浮物	mg/L	9	8	10	400
	氨氮	mg/L	0. 259	0. 247	0. 242	45
样品描述	样品性状均为： 颜色： 无； 外观： 较清； 气味： 无； 浮油： 无。					
备注	/					

This report shall not be altered, increased or deleted. The results shown in this test report refer only to the sample(s) tested. Without written approval of Hongyi Testing, this test report shall not be copied except in full and published as advertisement Hongyi Physical & Chemical Lab.

厦门泓益检测有限公司

Xiamen Hongyi Testing Co., Ltd.

地址: 福建省厦门市同安区轻工食品工业区美禾路 99 号

ADDRESS: No. 99 Meihe Road, Light Industry Food Industrial Zone, Tongan District, Xiamen City, Fujian Province,

邮箱: hongyotest@123.com



报告编号: HYI20260305A1313

附表: 质控信息

表 1: pH 值质控

检测项目	质控样(无量纲)	平行样(无量纲)
pH 值	7.08	0.0
评判指标	7.06 ± 0.05	± 0.1 个 pH 单位

表 2: 化学需氧量质控

检测项目	现场平行样 相对偏差 (%)	实验室平行样 相对偏差 (%)	质控样 (mg/L)	全程序空白 (mg/L)
化学需氧量	1.4	1.4	24.2	<4
评判指标	不超过 ± 10	不超过 ± 10	23.1 ± 2.5	低于检出限 (4mg/L)

表 3: 五日生化需氧量质控

检测项目	实验室平行样相对偏差 (%)	质控样 (mg/L)
五日生化需氧量 (BOD ₅)	8.3	47.5
评判指标	/	47.4 ± 3.5

表 4: 悬浮物质质控

检测项目	实验室平行样相对偏差 (%)
悬浮物	5.3
评判指标	/

表 5: 氨氮质控

检测项目	现场平行样 相对偏差 (%)	实验室平行样 相对偏差 (%)	质控样 (mg/L)	全程序空白 (mg/L)	实验室空白 (A ₀)	标准曲线
氨氮	1.9	1.1	2.15	<0.025	0.024	R=0.9998
评判指标	≤ 15	≤ 15	2.21 ± 0.09	低于检出限 (0.025mg/L)	不超过 0.030	R>0.999

This report shall not be altered, increased or deleted. The results shown in this test report refer only to the sample(s) tested. Without written approval of Hongyi Testing, this test report shall not be copied except in full and published as advertisement Hongyi Physical & Chemical Lab.

厦门泓益检测有限公司

Xiamen Hongyi Testing Co., Ltd.

地址: 福建省厦门市同安区轻工食品工业区美禾路 99 号


ADDRESS: No. 99 Meihe Road, Light Industry Food Industrial Zone, Tongan District, Xiamen City, Fujian Province,

邮箱: hongyotest@123.com



报告编号: HYI20260305A1313

附图: 检测点位示意图

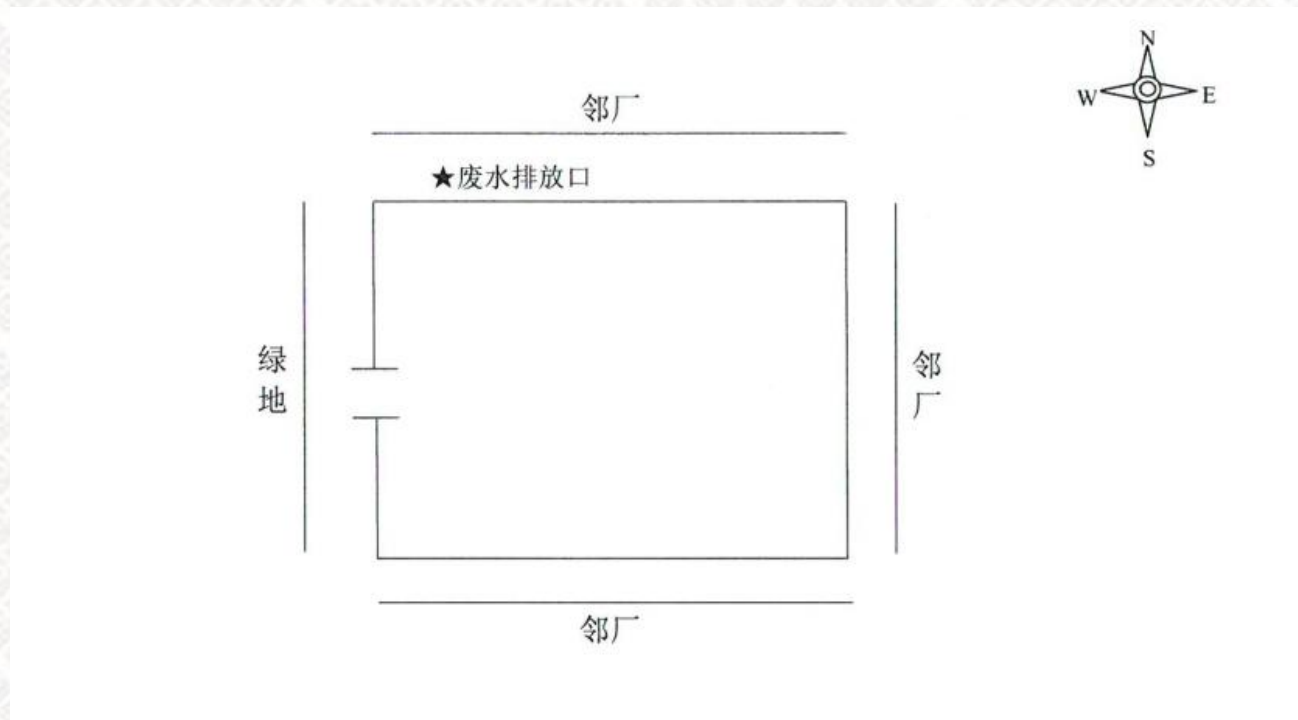

This report shall not be altered, increased or deleted. The results shown in this test report refer only to the sample(s) tested. Without written approval of Hongyi Testing, this test report shall not be copied except in full and published as advertisement Hongyi Physical & Chemical Lab.

厦门泓益检测有限公司

Xiamen Hongyi Testing Co., Ltd.

地址: 福建省厦门市同安区轻工食品工业区美禾路 99 号

ADDRESS: No. 99 Meihe Road, Light Industry Food Industrial Zone, Tongan District, Xiamen City, Fujian Province,

邮箱: hongyotest@123.com



报告编号: HYI20260305A1313

注 意 事 项:

1. 报告无“检验报告章”或检验单位公章无效。
2. 未经本实验室书面同意,不得部分复制本报告。
3. 报告无主检、审核、批准人签字无效。
4. 报告涂改无效。
5. 对检测报告若有异议,应于收到报告之日起十五日内向检测单位提出,逾期不予受理。
6. 委托检测仪对来样负责。

地址: 福建省厦门市同安区轻工食品工业区美禾路 99 号

Add: No. 99 Meihe Road, Light Industry Food Industrial Zone, Tongan District, Xiamen City, Fujian Province,

报告结束

This report shall not be altered, increased or deleted. The results shown in this test report refer only to the sample(s) tested. Without written approval of Hongyi Testing, this test report shall not be copied except in full and published as advertisement Hongyi Physical & Chemical Lab.

厦门泓益检测有限公司

Xiamen Hongyi Testing Co., Ltd.

地址: 福建省厦门市同安区轻工食品工业区美禾路 99 号

ADDRESS: No. 99 Meihe Road, Light Industry Food Industrial Zone, Tongan District, Xiamen City, Fujian Province,

邮箱: hongyotest@123.com