



检测报告

Test Report

送检企业: 佛山悍澜建材有限公司

样品名称: 玻镁吸音板

检验类别: 委托检验



厦门泓益检测有限公司

Xiamen Hongyi Testing Technology Co.Ltd

This report shall not be altered, increased or deleted. The results shown in this test report refer only to the sample(s) tested. Without written approval of Hongyi Testing, this test report shall not be copied except in full and published as advertisement Hongyi Physical & Chemical Lab.



报告编号: HYI202604140A136

样品名称	: 玻镁吸音板	型号规格	: 28/4
商标	: 悍澜	样品数量	: 6PCS
委托单位	: 佛山悍澜建材有限公司		
委托单位地址	: 佛山市顺德区龙江镇新龙工业区 5 号		
生产单位	: 佛山悍澜建材有限公司		
取样地址	: 佛山市顺德区龙江镇新龙工业区 5 号		
检验类别	: 委托检验	测试日期	: 2026 年 04 月 07 日-2026 年 04 月 14 日
签发日期	: 2026 年 04 月 14 日		
检验依据	: GB/T 18696.2-2002 声学阻抗管中吸声系数和声阻抗的测量第 2 部分: 传递函数法 GB/T 16731-1997 建筑吸声产品的吸声性能分级		
检验项目	: 见后续		
样品特征和状态	: 完好		
环境温度	: 24.6°C	环境湿度	: 62%
测试结果	: 本次委托检验, 所检项目全部符合标准要求		

报告编制: 张华伟

报告审核: 杨泽群

检测专用章
报告签发: 杨泽群

This report shall not be altered, increased or deleted. The results shown in this test report refer only to the sample(s) tested. Without written approval of Hongyi Testing, this test report shall not be copied except in full and published as advertisement Hongyi Physical & Chemical Lab.



报告编号: HYI202604140A136

型号: TS-MZ13/3

测试室温度: 21°C

相对湿度: 55%


大气压: 101 KPa

试件面积: 64 mm²

试件厚度: 16 mm

三分之一倍频带吸声测试结果:

频率[Hz]	as 1/3 倍频带	ap 加权平均值
100	0.20	0.45
125	0.48	
160	0.61	
200	0.72	0.75
250	0.75	
315	0.76	
400	0.82	0.90
500	0.89	
630	0.83	
800	0.81	0.80
1000	0.79	
1250	0.72	
1600	0.67	0.70
2000	0.65	
2500	0.71	
3150	0.66	0.65
4000	0.60	
5000	0.56	

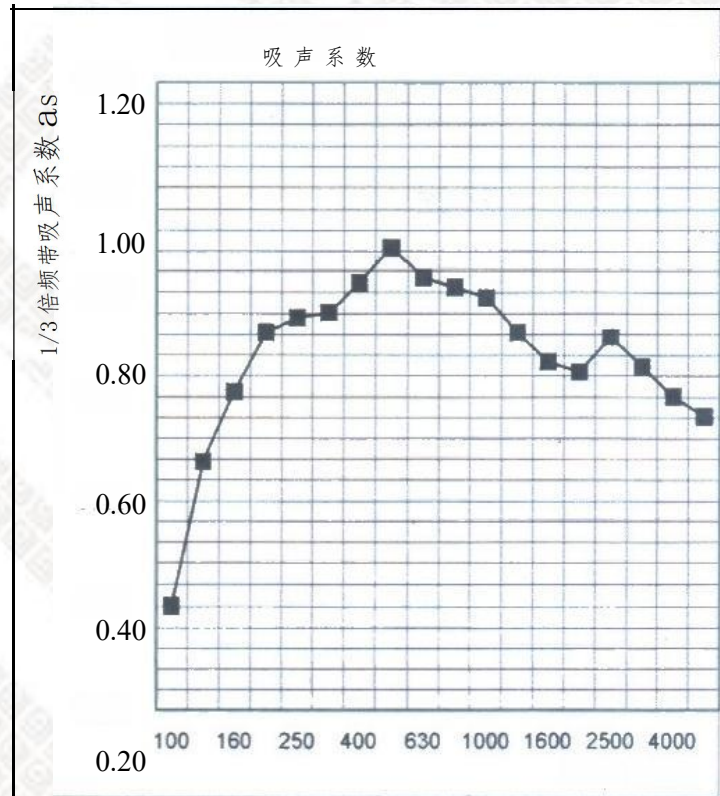

1/3 倍频带吸声系数符合 GB/T 18696.2-2002

适用吸声系数符合 GB/T 16731-1997

This report shall not be altered, increased or deleted. The results shown in this test report refer only to the sample(s) tested. Without written approval of Hongyi Testing, this test report shall not be copied except in full and published as advertisement Hongyi Physical & Chemical Lab.

厦门泓益检测有限公司

Xiamen Hongyi Testing Co., Ltd.

地址: 福建省厦门市同安区轻工食品工业区美禾路 99 号

ADDRESS: No. 99 Meihe Road, Light Industry Food Industrial Zone, Tongan District, Xiamen City, Fujian Province,

邮箱: hongyotest@123.com





样品照片

This report shall not be altered, increased or deleted. The results shown in this test report refer only to the sample(s) tested. Without written approval of Hongyi Testing, this test report shall not be copied except in full and published as advertisement Hongyi Physical & Chemical Lab.



报告编号: HYI202604140A136

注意事项:

1. 报告无“检验报告章”或检验单位公章无效。
2. 未经本实验室书面同意,不得部分复制本报告。
3. 报告无主检、审核、批准人签字无效。
4. 报告涂改无效。
5. 对检测报告若有异议,应于收到报告之日起十五日内向检测单位提出,逾期不予受理。
6. 委托检测仅对来样负责。

地址:福建省厦门市同安区轻工食品工业区美禾路 99 号

Add: No. 99 Meihe Road, Light Industry Food Industrial Zone, Tongan District, Xiamen City, Fujian Province,

报告结束

This report shall not be altered, increased or deleted. The results shown in this test report refer only to the sample(s) tested. Without written approval of Hongyi Testing, this test report shall not be copied except in full and published as advertisement Hongyi Physical & Chemical Lab.

厦门泓益检测有限公司

Xiamen Hongyi Testing Co., Ltd.

地址:福建省厦门市同安区轻工食品工业区美禾路 99 号

ADDRESS: No. 99 Meihe Road, Light Industry Food Industrial Zone, Tongan District, Xiamen City, Fujian Province,

邮箱: hongyotest@123.com

同安公司