



检测报告

Test Report

送检企业: 湖北永祥粮食机械股份有限公司

样品名称: 复式回转白米筛

检验类别: 委托检验


厦门泓益检测有限公司

Xiamen Hongyi Testing Technology Co.Ltd

This report shall not be altered, increased or deleted. The results shown in this test report refer only to the sample(s) tested. Without written approval of Hongyi Testing, this test report shall not be copied except in full and published as advertisement Hongyi Physical & Chemical Lab.

厦门泓益检测有限公司

Xiamen Hongyi Testing Co., Ltd.

地址: 福建省厦门市同安区轻工食品工业区美禾路 99 号

ADDRESS: No. 99 Meihe Road, Light Industry Food Industrial Zone, Tongan District, Xiamen City, Fujian Province,


邮箱: hongyotest@123.com



样品名称	: 复式回转白米筛	型号规格	: MMJP170×(5+1)
商标	: 永祥	样品数量	: 1台
委托单位	: 湖北永祥粮食机械股份有限公司		
委托单位地址	: 湖北省安陆市府河大道2号		
生产单位	: 湖北永祥粮食机械股份有限公司		
生产单位地址	: 湖北省安陆市府河大道2号		
检验类别	: 委托检验	测试日期	: 2026年03月10日-2026年03月12日
签发日期	: 2026年03月12日		
检验依据	: Q/HYX01-2026《白米分级筛》		
检验项目	: 见后续		
样品特征和状态	: 完好		
环境温度	: 24.6℃	环境湿度	: 62%
测试结果	: 本次委托检验, 所检项目全部符合标准要求		

报告编制: 张华伟

报告审核: 杨泽群

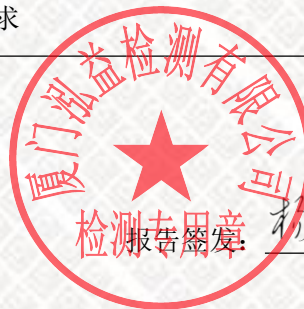

检测专用章: 杨泽群

This report shall not be altered, increased or deleted. The results shown in this test report refer only to the sample(s) tested. Without written approval of Hongyi Testing, this test report shall not be copied except in full and published as advertisement Hongyi Physical & Chemical Lab.



报告编号: HYI202603120A1205

序号	检测项目	技术要求	实测结果	判定
1	小时处理产量	8~10t/h	9.2t/h	合格
2	配套电机功率	≥2.2kW	2.2kW 变频电机	合格
3	调速方式	变频器无级调速、回转幅度可调	变频调速平稳, 偏心行程调节顺畅	合格
4	糠团分选	独立糠团筛选机构	单独筛路分离糠团, 出料顺畅	合格
5	筛面层数	≥5 层	实际 6 层筛面 (5+1)	合格
6	分级效果	分出整米、一般米、中碎、小碎四级	四种米分级清晰, 混杂率达标	合格
7	进料结构	进料端垂直吸风装置	吸风装置运行正常、除糠除尘	合格
8	出料结构	出料端通风冷却装置	冷却风机工作稳定, 出料降温达标	合格
9	筛面有效宽度	≥160cm	170cm	合格
10	主轴轴承温升	≤20K	12K	合格
11	空载噪声	≤80dB(A)	68dB(A)	合格
12	整机运行状态	筛体回转平稳无异常晃动异响	运行平稳无磕碰杂音	合格

This report shall not be altered, increased or deleted. The results shown in this test report refer only to the sample(s) tested. Without written approval of Hongyi Testing, this test report shall not be copied except in full and published as advertisement Hongyi Physical & Chemical Lab.

测有
用章



注 意 事 项:

1. 报告无“检验报告章”或检验单位公章无效。
2. 未经本实验室书面同意,不得部分复制本报告。
3. 报告无主检、审核、批准人签字无效。
4. 报告涂改无效。
5. 对检测报告若有异议,应于收到报告之日起十五日内向检测单位提出,逾期不予受理。
6. 委托检测仪对来样负责。

地址:福建省厦门市同安区轻工食品工业区美禾路 99 号

Add: No. 99 Meihe Road, Light Industry Food Industrial Zone, Tongan District, Xiamen City, Fujian Province,

报告结束

This report shall not be altered, increased or deleted. The results shown in this test report refer only to the sample(s) tested. Without written approval of Hongyi Testing, this test report shall not be copied except in full and published as advertisement Hongyi Physical & Chemical Lab.

厦门泓益检测有限公司

Xiamen Hongyi Testing Co., Ltd.

地址:福建省厦门市同安区轻工食品工业区美禾路 99 号

ADDRESS: No. 99 Meihe Road, Light Industry Food Industrial Zone, Tongan District, Xiamen City, Fujian Province,

邮箱: hongyotest@123.com