



检测报告

Test Report

送检企业: 恒玥桂森环境发展(张家口)有限公司

样品名称: 废气、噪声

检验类别: 委托检验


厦门泓益检测有限公司

Xiamen Hongyi Testing Technology Co.Ltd

This report shall not be altered, increased or deleted. The results shown in this test report refer only to the sample(s) tested. Without written approval of Hongyi Testing, this test report shall not be copied except in full and published as advertisement Hongyi Physical & Chemical Lab.



报告编号: HYI20260311A144

1. 检测信息

客户基本情况										
委托单位信息	单位名称	恒玥桂森环境发展（张家口）有限公司								
	通讯地址	河北省张家口市桥东区军鹏机动车检测站东 200 米								
	联系人	黄国杨	联系电话	18958598332						
受检单位信息	单位名称	恒玥桂森环境发展（张家口）有限公司								
	生产地址	河北省张家口市桥东区军鹏机动车检测站东 200 米								
	联系人	黄国杨	联系电话	18958598332						
样品基本情况										
样品类别	样品名称	采样点位	采样频次		采样人员	采样时间	收样人员	收样时间	分析时间	样品状态描述
			天数	次/天						
废气	废气(无组织)	厂界上风向一个点	2	3	郭浩	2026.03.03	王明轩	2026.03.04	2026.03.03-2026.03.11	完好
		厂界下风向三个点	2	3	郭浩	2026.03.03	王明轩	2026.03.04	2026.03.03-2026.03.11	完好
噪声	昼夜噪声	厂界四周	2	3	郭浩	2026.03.03	王明轩	2026.03.04	2026.03.03-2026.03.11	完好
	白天噪声	工作场所	2	3	郭浩	2026.03.03	王明轩	2026.03.04	2026.03.03-2026.03.11	完好

报告编制: 张华伟

报告审核: 杨群

报告签发: 杨群

This report shall not be altered, increased or deleted. The results shown in this test report refer only to the sample(s) tested. Without written approval of Hongyi Testing, this test report shall not be copied except in full and published as advertisement Hongyi Physical & Chemical Lab.



报告编号: HYI20260311A144

检测项目、检测方法及仪器设备:

序号	检测项目	分析方法及标准代号	主要仪器名称、型号及编号	方法检出限
1	颗粒物	《环境空气总悬浮颗粒物的测定 重量法》 HJ 1263-2022	BTPM-MWS1 滤膜半自动称重 系统 RC-YQ-SY-038	0.007mg/m ³
			ME55/02 电子天平 RC-YQ-SY-035	
			崂应 2050 型空气/智能 TSP 综合 采样器 RC-YQ-XC-001/002/004/006	
2	低浓度颗粒物	《固定污染源废气低浓度颗粒物的测定重量法》 HJ836-2017	BTPM-MWS1 滤膜半自动称重 系统 RC-YQ-SY-038	1.0mg/m ³
			WE55/02 电子天平 RC-YQ-SY-035	
			崂应 3012H 型烟尘/气测试仪 RC-YQ-XC-014/015	
3	噪声	《工业企业厂界环境噪声排放标准》 GB 12348-2008	AWA5688 型多功能声级计 RC-YQ-XC-038	-----
			AWA6021A 型声校准器 RC-YQ-XC-086	

This report shall not be altered, increased or deleted. The results shown in this test report refer only to the sample(s) tested. Without written approval of Hongyi Testing, this test report shall not be copied except in full and published as advertisement Hongyi Physical & Chemical Lab.

厦门泓益检测有限公司

Xiamen Hongyi Testing Co., Ltd.

地址: 福建省厦门市同安区轻工食品工业区美禾路 99 号

ADDRESS: No. 99 Meihe Road, Light Industry Food Industrial Zone, Tongan District, Xiamen City, Fujian Province,

邮箱: hongyotest@123.com



报告编号: HYI20260311A144

质控措施

- 1、检测分析方法采用国家颁布的标准分析方法均现行有效，检测人员经考核并持有上岗证，所用仪器经 计量部门检定并在有效期内。
- 2、分析室做样品分析同时做平行样品分析，现场测试前后做仪器校准，质控措施分析结果符合分析方法 标准要求，确保检测结果的准确度、精密度。
- 3、检测数据严格执行三级审核制度。

This report shall not be altered, increased or deleted. The results shown in this test report refer only to the sample(s) tested. Without written approval of Hongyi Testing, this test report shall not be copied except in full and published as advertisement Hongyi Physical & Chemical Lab.



报告编号: HYI20260311A144

检测结果

检测项目	采样日期	检测点位	检测结果 (mg/m ³)			最高值 (mg/m ³)	检测人员
颗粒物	2026.03.03	上风向	0.352	0.335	0.368	0.368	郭浩 王明轩
		下风向 1	0.785	0.802	0.822	0.822	
		下风向 2	0.777	0.761	0.795	0.795	
		下风向 3	0.757	0.774	0.783	0.783	
无组织废气检测							

This report shall not be altered, increased or deleted. The results shown in this test report refer only to the sample(s) tested. Without written approval of Hongyi Testing, this test report shall not be copied except in full and published as advertisement Hongyi Physical & Chemical Lab.



报告编号: HYI20260311A144

有组织废气检测点位 及时间	检测项目	检测结果				检测人员
		1	2	3	平均值	
原料上料废气 排气筒进口 2026.03.03	排气量(m ³ /h)	4518	4602	4618	4579	王晓龙、翟少东
	颗粒物实测浓度(mg/m ³)	203.8	208.8	208.7	207.1	郭浩、王明轩
	颗粒物排放速率(kg/h)	0.92	0.96	0.96	0.95	郭浩、王明轩
	烟温(°C)	27.1	27.8	28.1	27.7	王晓龙、翟少东
	湿度(%)	2.4	2.6	2.5	2.5	王晓龙、翟少东
	流速(m/s)	12.5	12.8	12.9	12.7	王晓龙、翟少东
	排气筒高度	--				--
工况	85%				--	
检测点位 及时间	检测项目	检测结果				检测人员
		1	2	3	平均值	
原料上料废气 排气筒出口 2026.03.03	排气量(m ³ /h)	3271	3582	3687	3513	赵崇智、梁迎慧
	颗粒物实测浓度(mg/m ³)	40.6	41.6	48.4	43.5	郭浩、王明轩
	颗粒物排放速率(kg/h)	0.13	0.15	0.18	0.15	郭浩、王明轩
	烟温(°C)	33.7	35.1	35.2	34.6	赵崇智、梁迎慧
	湿度(%)	2.1	2.2	2.3	2.2	赵崇智、梁迎慧
	流速(m/s)	5.9	6.5	6.7	6.4	赵崇智、梁迎慧
	排气筒高度	15m				-
工况	85%				-	
筛选废气排气筒进口 2026.03.03	排气量(m ³ /h)	5416	5482	5473	5457	王晓龙、翟少东
	颗粒物实测浓度(mg/m ³)	194.1	191.1	181.9	189.0	郭浩、王明轩
	颗粒物排放速率(kg/h)	1.05	1.05	1.00	1.03	郭浩、王明轩
	烟温(°C)	34.2	33.7	33.1	33.7	王晓龙、翟少东
	湿度(%)	2.3	2.4	2.2	2.3	王晓龙、翟少东

This report shall not be altered, increased or deleted. The results shown in this test report refer only to the sample(s) tested. Without written approval of Hongyi Testing, this test report shall not be copied except in full and published as advertisement Hongyi Physical & Chemical Lab.



报告编号: HYI20260311A144

	流速 (m/s)	15.4	15.6	15.5	15.5	王晓龙、翟少东
	排气筒高度	15m				--
	工况	85%				--
筛选废气排气筒出口 2026.03.03	排气量 (m ³ /h)	4584	4624	4618	4609	赵崇智、梁迎慧
	颗粒物实测浓度 (mg/m ³)	46.0	44.4	51.6	47.3	郭浩、王明轩
	颗粒物排放速率 (kg/h)	0.21	0.21	0.24	0.22	郭浩、王明轩
	烟温 (°C)	37.0	36.4	36.0	36.5	赵崇智、梁迎慧
	湿度 (%)	2.0	2.2	2.3	2.2	赵崇智、梁迎慧
	流速 (m/s)	8.4	8.5	8.5	8.5	赵崇智、梁迎慧
	排气筒高度	15m				--
	工况	85%				--

This report shall not be altered, increased or deleted. The results shown in this test report refer only to the sample(s) tested. Without written approval of Hongyi Testing, this test report shall not be copied except in full and published as advertisement Hongyi Physical & Chemical Lab.



报告编号: HYI20260311A144


检测点位 检测结果	2026.03.03				检测人员
	厂界东	厂界南	厂界西	厂界北	
昼[dB(A)]	61.8	61.7	61.8	62.6	宋巍、李阳
夜[dB(A)]	46.9	49.9	49.9	50.8	宋巍、李阳
噪声检测结果					

This report shall not be altered, increased or deleted. The results shown in this test report refer only to the sample(s) tested. Without written approval of Hongyi Testing, this test report shall not be copied except in full and published as advertisement Hongyi Physical & Chemical Lab.



报告编号: HYI20260311A144

附: 噪声检测布点

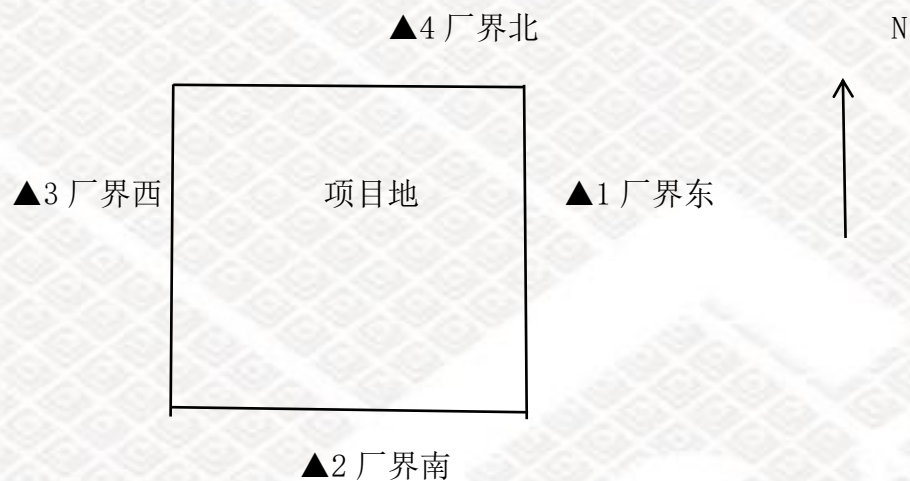

This report shall not be altered, increased or deleted. The results shown in this test report refer only to the sample(s) tested. Without written approval of Hongyi Testing, this test report shall not be copied except in full and published as advertisement Hongyi Physical & Chemical Lab.



报告编号: HYI20260311A144

注意事项:

1. 报告无“检验报告章”或检验单位公章无效。
2. 未经本实验室书面同意, 不得部分复制本报告。
3. 报告无主检、审核、批准人签字无效。
4. 报告涂改无效。
5. 对检测报告若有异议, 应于收到报告之日起十五日内向检测单位提出, 逾期不予受理。
6. 委托检测仅对来样负责。

地址: 福建省厦门市同安区轻工食品工业区美禾路 99 号

Add: No. 99 Meihe Road, Light Industry Food Industrial Zone, Tongan District, Xiamen City, Fujian Province,

*****报告结束*****

This report shall not be altered, increased or deleted. The results shown in this test report refer only to the sample(s) tested. Without written approval of Hongyi Testing, this test report shall not be copied except in full and published as advertisement Hongyi Physical & Chemical Lab.

厦门泓益检测有限公司

Xiamen Hongyi Testing Co., Ltd.

地址: 福建省厦门市同安区轻工食品工业区美禾路 99 号

ADDRESS: No. 99 Meihe Road, Light Industry Food Industrial Zone, Tongan District, Xiamen City, Fujian Province,

邮箱: hongyotest@123.com