



检测报告

Test Report

送检企业: 甘肃瑞昕线缆有限责任公司

样品名称: 噪声

检验类别: 委托检验

厦门泓益检测有限公司

Xiamen Hongyi Testing Technology Co.Ltd

This report shall not be altered, increased or deleted. The results shown in this test report refer only to the sample(s) tested. Without written approval of Hongyi Testing, this test report shall not be copied except in full and published as advertisement Hongyi Physical & Chemical Lab.



报告编号: HYI20260527A712

1. 检测信息

客户基本情况										
委托单位信息	单位名称	甘肃瑞昕线缆有限责任公司								
	通讯地址	甘肃省张掖市山丹县城北工业园区								
	联系人	贺伟	联系电话	187 0936 8414						
受检单位信息	单位名称	甘肃瑞昕线缆有限责任公司								
	通讯地址	甘肃省张掖市山丹县城北工业园区								
	联系人	贺伟	联系电话	187 0936 8414						
样品基本情况										
样品类别	样品名称	采样点位	采样频次		采样人员	采样时间	收样人员	收样时间	分析时间	样品状态描述
			天数	次/天						
噪声	昼夜噪声	厂界四周	1	3	郭浩	2026.05.22	王明轩	2026.05.22	2026.05.22-2026.05.27	完好

报告编制:

张华伟

报告审核:

杨群

报告签发:

杨群

This report shall not be altered, increased or deleted. The results shown in this test report refer only to the sample(s) tested. Without written approval of Hongyi Testing, this test report shall not be copied except in full and published as advertisement Hongyi Physical & Chemical Lab.

厦门泓益检测有限公司

Xiamen Hongyi Testing Co., Ltd.

地址: 福建省厦门市同安区轻工食品工业区美禾路 99 号

ADDRESS: No. 99 Meihe Road, Light Industry Food Industrial Zone, Tongan District, Xiamen City, Fujian Province,

邮箱: hongyotest@123.com



报告编号: HYI20260527A712

1. 检测分析方法

样品类别	检测项目	检测方法	检测和分析设备	最低检出限
噪声	昼夜噪声	工业企业厂界环境噪声排放标准 GB 12348-2008	多功能声级计 AWA6228+ 声校准器 AWA6021A	--

2. 检测结果

2.3 噪声检测结果

测点编号	测点位置		主要声源	功能区类型		备注
1	东厂界, 离地高度 1.2m		造粒塔、风机、输送带	3 类区		/
2	南厂界, 离地高度 1.2m		硫化机、注塑机组	3 类区		/
3	西厂界, 离地高度 1.2m		隧道炉、冷却风机	3 类区		/
4	北厂界, 离地高度 1.2m		原料输送设备、空压机	3 类区		/
测点编号	检测日期	检测时段	检测时间	等效声级 Leq [dB (A)]		评价
				检测结果	标准限值	
1	06.20	昼间	09:05	52.6	65	达标
		夜间	22:18	47.2	55	达标

This report shall not be altered, increased or deleted. The results shown in this test report refer only to the sample(s) tested. Without written approval of Hongyi Testing, this test report shall not be copied except in full and published as advertisement Hongyi Physical & Chemical Lab.

厦门泓益检测有限公司

Xiamen Hongyi Testing Co., Ltd.

地址: 福建省厦门市同安区轻工食品工业区美禾路 99 号

ADDRESS: No. 99 Meihe Road, Light Industry Food Industrial Zone, Tongan District, Xiamen City, Fujian Province,

邮箱: hongyotest@123.com



报告编号: HYI20260527A712

测点编号	测点位置		主要声源	功能区类型		备注
	06.21	昼间	09:17	52.1	65	达标
		夜间	23:10	46.3	55	达标
2	06.20	昼间	09:12	51.9	65	达标
		夜间	22:35	46.1	55	达标
	06.21	昼间	09:26	51.5	65	达标
		夜间	23:08	45.8	55	达标
3	06.20	昼间	09:21	51.3	65	达标
		夜间	22:42	45.6	55	达标
	06.21	昼间	09:30	50.9	65	达标
		夜间	22:29	45.1	55	达标
4	06.20	昼间	09:33	52.2	65	达标
		夜间	23:05	47.5	55	达标
	06.21	昼间	09:45	52.4	65	达标

This report shall not be altered, increased or deleted. The results shown in this test report refer only to the sample(s) tested. Without written approval of Hongyi Testing, this test report shall not be copied except in full and published as advertisement Hongyi Physical & Chemical Lab.



报告编号: HYI20260527A712

测点编号	测点位置		主要声源	功能区类型		备注
		夜间	22:52	46.8	55	达标

测点编号	检测日期	检测时段	检测时间	等效声级 Leq [dB (A)]		评价
				检测结果	标准限值	
1	06.20	昼间	09:05	52.6	65	达标
		夜间	22:18	47.2	55	达标
	06.21	昼间	09:17	52.1	65	达标
		夜间	23:10	46.3	55	达标
2	06.20	昼间	09:12	51.9	65	达标
		夜间	22:35	46.1	55	达标
	06.21	昼间	09:26	51.5	65	达标
		夜间	23:08	45.8	55	达标
3	06.20	昼间	09:21	51.3	65	达标

This report shall not be altered, increased or deleted. The results shown in this test report refer only to the sample(s) tested. Without written approval of Hongyi Testing, this test report shall not be copied except in full and published as advertisement Hongyi Physical & Chemical Lab.



报告编号: HYI20260527A712

测点编号	检测日期	检测时段	检测时间	等效声级 Leq [dB (A)]		
		夜间	22:42	45.6	55	达标
	06.21	昼间	09:30	50.9	65	达标
		夜间	22:29	45.1	55	达标
4	06.20	昼间	09:33	52.2	65	达标
		夜间	23:05	47.5	55	达标
	06.21	昼间	09:45	52.4	65	达标
		夜间	22:52	46.8	55	达标

This report shall not be altered, increased or deleted. The results shown in this test report refer only to the sample(s) tested. Without written approval of Hongyi Testing, this test report shall not be copied except in full and published as advertisement Hongyi Physical & Chemical Lab.

厦门泓益检测有限公司

Xiamen Hongyi Testing Co., Ltd.

地址: 福建省厦门市同安区轻工食品工业区美禾路 99 号


ADDRESS: No. 99 Meihe Road, Light Industry Food Industrial Zone, Tongan District, Xiamen City, Fujian Province,

邮箱: hongyotest@123.com



报告编号: HYI20260527A712

附: 噪声检测布点

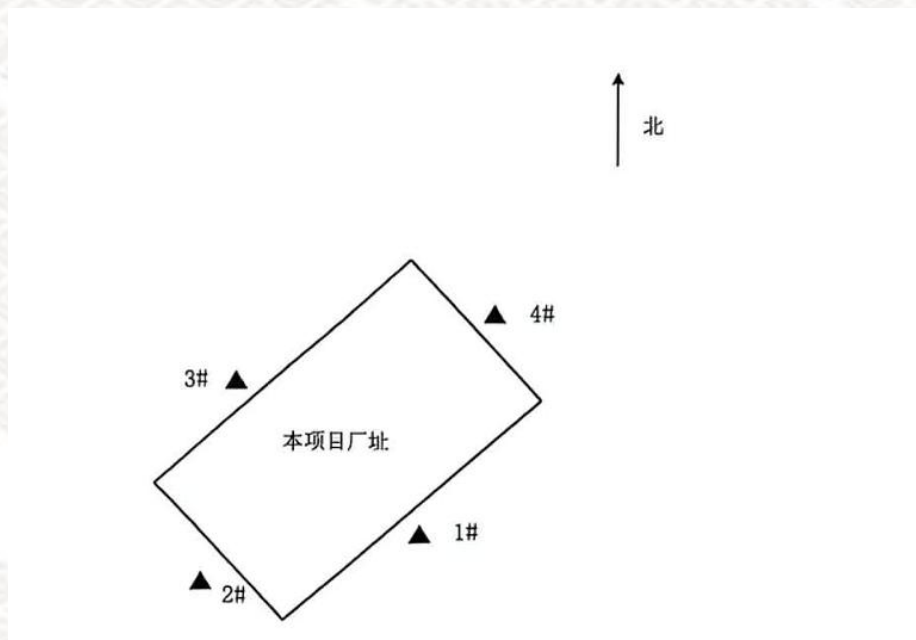

This report shall not be altered, increased or deleted. The results shown in this test report refer only to the sample(s) tested. Without written approval of Hongyi Testing, this test report shall not be copied except in full and published as advertisement Hongyi Physical & Chemical Lab.



报告编号: HYI20260527A712

注意事项:

1. 报告无“检验报告章”或检验单位公章无效。
2. 未经本实验室书面同意, 不得部分复制本报告。
3. 报告无主检、审核、批准人签字无效。
4. 报告涂改无效。
5. 对检测报告若有异议, 应于收到报告之日起十五日内向检测单位提出, 逾期不予受理。
6. 委托检测仅对来样负责。

地址: 福建省厦门市同安区轻工食品工业区美禾路 99 号

Add: No. 99 Meihe Road, Light Industry Food Industrial Zone, Tongan District, Xiamen City, Fujian Province,

报告结束

This report shall not be altered, increased or deleted. The results shown in this test report refer only to the sample(s) tested. Without written approval of Hongyi Testing, this test report shall not be copied except in full and published as advertisement Hongyi Physical & Chemical Lab.

厦门泓益检测有限公司

Xiamen Hongyi Testing Co., Ltd.

地址: 福建省厦门市同安区轻工食品工业区美禾路 99 号

ADDRESS: No. 99 Meihe Road, Light Industry Food Industrial Zone, Tongan District, Xiamen City, Fujian Province,

邮箱: hongyotest@123.com