



# 检测报告

## Test Report

送检企业: 浙江闽德智控科技有限公司

样品名称: 废气、废水、噪声

检验类别: 委托检验



厦门泓益检测有限公司

Xiamen Hongyi Testing Technology Co.Ltd

This report shall not be altered, increased or deleted. The results shown in this test report refer only to the sample(s) tested. Without written approval of Hongyi Testing, this test report shall not be copied except in full and published as advertisement Hongyi Physical & Chemical Lab.

厦门泓益检测有限公司

Xiamen Hongyi Testing Co., Ltd.

地址: 福建省厦门市同安区轻工食品工业区美禾路 99 号

ADDRESS: No. 99 Meihe Road, Light Industry Food Industrial Zone, Tongan District, Xiamen City, Fujian Province,

邮箱: hongyotest@123.com



报告编号: HYI20260828A0177

## 1. 检测信息

| 客户基本情况 |         |      |                                 |     |      |            |      |             |                       |        |  |
|--------|---------|------|---------------------------------|-----|------|------------|------|-------------|-----------------------|--------|--|
| 委托单位信息 |         | 单位名称 | 浙江闽德智控科技有限公司                    |     |      |            |      |             |                       |        |  |
|        |         | 通讯地址 | 浙江省温州市永嘉县瓯北街道东瓯工业区（浙江泰通阀门有限公司内） |     |      |            |      |             |                       |        |  |
|        |         | 联系人  | 卓明杰                             |     |      | 联系电话       |      | 18750932253 |                       |        |  |
| 受检单位信息 |         | 单位名称 | 浙江闽德智控科技有限公司                    |     |      |            |      |             |                       |        |  |
|        |         | 通讯地址 | 浙江省温州市永嘉县瓯北街道东瓯工业区（浙江泰通阀门有限公司内） |     |      |            |      |             |                       |        |  |
|        |         | 联系人  | 徐经理                             |     |      | 联系电话       |      | 13665124890 |                       |        |  |
| 样品基本情况 |         |      |                                 |     |      |            |      |             |                       |        |  |
| 样品类别   | 样品名称    | 采样点位 | 采样频次                            |     | 采样人员 | 采样时间       | 收样人员 | 收样时间        | 分析时间                  | 样品状态描述 |  |
|        |         |      | 天数                              | 次/天 |      |            |      |             |                       |        |  |
| 废气     | 废气（无组织） | 上下四周 | 1                               | 3   | 郭浩   | 2026.08.21 | 王明轩  | 2026.08.22  | 2026.08.21-2026.08.28 | 完好     |  |
| 噪声     | 昼夜噪声    | 厂界四周 | 1                               | 8   | 郭浩   | 2026.08.21 | 王明轩  | 2026.08.22  | 2026.08.21-2026.08.28 | 完好     |  |
| 废水     | 废水      | 废水排口 | 1                               | 3   | 郭浩   | 2026.08.21 | 王明轩  | 2026.08.22  | 2026.08.21-2026.08.28 | 完好     |  |

报告编制:

张华伟

报告审核:

杨群

报告签发:

杨群

This report shall not be altered, increased or deleted. The results shown in this test report refer only to the sample(s) tested. Without written approval of Hongyi Testing, this test report shall not be copied except in full and published as advertisement Hongyi Physical & Chemical Lab.

厦门泓益检测有限公司

Xiamen Hongyi Testing Co., Ltd.

地址: 福建省厦门市同安区轻工食品工业区美禾路 99 号

ADDRESS: No. 99 Meihe Road, Light Industry Food Industrial Zone, Tongan District, Xiamen City, Fujian Province,

邮箱: hongyotest@123.com



报告编号: HYI20260828A0177

## 1. 检测分析方法

| 样品类别        | 检测项目  | 检测方法                                      | 检测和分析设备                                                         | 最低检出限                  |
|-------------|-------|-------------------------------------------|-----------------------------------------------------------------|------------------------|
| 废水          | 化学需氧量 | 水质 化学需氧量的测定 重铬酸盐法 HJ 828-2017             | 便携式 pH 计 PHBJ-260                                               | 4mg/L                  |
|             | 悬浮物   | 水质 悬浮物的测定 重量法 GB 11901-1989               | 水质多参数仪 SX836<br>多功能声级计 AWA6228+                                 | 4mg/L                  |
|             | 氨氮    | 水质 氨氮的测定 纳氏试剂分光光度法 HJ 535-2009            | 声校准器 AWA6021A<br>自动烟尘(气)测试仪 3012H                               | 0.025mg/L              |
|             | 动植物油  | 水质 石油类和动植物油类的测定 红外分光光度法 HJ 637-2018       | 手持式气象仪 NK5500<br>智能综合采样器 ADS.2062E.2.0<br>低浓度称量恒温恒湿设备 JNVN.800S | 0.01mg/L               |
|             | pH 值  | 水质 pH 值的测定 电极法 HJ 1147-2020               | 十万分位天平 MS105DU<br>万分位天平 ME 204                                  | —                      |
| 废气<br>(无组织) | 颗粒物   | 环境空气 总悬浮颗粒物的测定 重量法 GB/T 15432-1995        | 电热恒温鼓风干燥箱 DHG.9203A<br>紫外可见分光光度计 UV.1800PC                      | 0.001mg/m <sup>3</sup> |
|             | 非甲烷总烃 | 环境空气 总烃、甲烷和非甲烷总烃的测定 直接进样-气相色谱法 HJ604-2017 | 压力蒸汽灭菌器 DSX.18L(非医疗)<br>自动烟尘烟气综合测试仪 ZR-3260                     |                        |
| 噪声          | 昼夜噪声  | GB12348-2025《工业企业厂界环境噪声排放标准》3类            | 自动烟尘(气)测试仪(6个烟气检测器) 3012H                                       | —                      |

This report shall not be altered, increased or deleted. The results shown in this test report refer only to the sample(s) tested. Without written approval of Hongyi Testing, this test report shall not be copied except in full and published as advertisement Hongyi Physical & Chemical Lab.

厦门泓益检测有限公司

Xiamen Hongyi Testing Co., Ltd.

地址: 福建省厦门市同安区轻工食品工业区美禾路 99 号

ADDRESS: No. 99 Meihe Road, Light Industry Food Industrial Zone, Tongan District, Xiamen City, Fujian Province,

邮箱: hongyotest@123.com



报告编号: HYI20260828A0177

## 2. 检测结果

### 2.1 废水检测结果

| 采样时间       | 采样位置  | 检测项目  | 单位   | 检测结果  |       |       | 限值  | 结果评价 |
|------------|-------|-------|------|-------|-------|-------|-----|------|
|            |       |       |      | 第一次   | 第二次   | 第三次   |     |      |
| 2026.08.21 | 污水排水口 | pH值   | 无量纲  | 7.8   | 7.5   | 7.7   | 6-9 | 达标   |
|            |       | 化学需氧量 | mg/L | 351   | 361   | 366   | 500 | 达标   |
|            |       | 悬浮物   | mg/L | 62    | 68    | 77    | 400 | 达标   |
|            |       | 氨氮    | mg/L | 34.3  | 37.5  | 36.4  | 45  | 达标   |
|            |       | 动植物油  | mg/L | 13.59 | 13.45 | 14.02 | -   | 达标   |

This report shall not be altered, increased or deleted. The results shown in this test report refer only to the sample(s) tested. Without written approval of Hongyi Testing, this test report shall not be copied except in full and published as advertisement Hongyi Physical & Chemical Lab.

厦门泓益检测有限公司

Xiamen Hongyi Testing Co., Ltd.

地址: 福建省厦门市同安区轻工食品工业区美禾路 99 号

ADDRESS: No. 99 Meihe Road, Light Industry Food Industrial Zone, Tongan District, Xiamen City, Fujian Province,

邮箱: hongyotest@123.com



报告编号: HYI20260828A0177

## 2.2 无组织废气检测结果

| 采样时间       | 采样地点      | 检测项目   | 检测结果 (mg/m <sup>3</sup> ) |       |       | 排放标准限值 (mg/m <sup>3</sup> ) | 结果评价 |
|------------|-----------|--------|---------------------------|-------|-------|-----------------------------|------|
|            |           |        | 第一次                       | 第二次   | 第三次   |                             |      |
| 2026.08.21 | 上风向参照点 G1 | 总悬浮颗粒物 | 0.156                     | 0.136 | 0.127 | —                           | —    |
|            | 上风向监控点 G2 |        | 0.299                     | 0.247 | 0.207 | 1.0                         | 达标   |
|            | 下风向监控点 G3 |        | 0.306                     | 0.231 | 0.202 | 1.0                         | 达标   |
|            | 下风向监控点 G4 |        | 0.219                     | 0.237 | 0.199 | 1.0                         | 达标   |
|            | 上风向参照点 G1 | 非甲烷总烃  | 1.20                      | 1.11  | 1.09  | —                           | —    |
|            | 上风向监控点 G2 |        | 1.40                      | 1.39  | 1.61  | 4.0                         | 达标   |
|            | 下风向监控点 G3 |        | 1.48                      | 1.53  | 1.66  | 4.0                         | 达标   |
|            | 下风向监控点 G4 |        | 1.70                      | 1.59  | 1.64  | 4.0                         | 达标   |

This report shall not be altered, increased or deleted. The results shown in this test report refer only to the sample(s) tested. Without written approval of Hongyi Testing, this test report shall not be copied except in full and published as advertisement Hongyi Physical & Chemical Lab.




报告编号: HYI20260828A0177

## 2.3 厂界噪声:

| 监测日期         | 检测点位        | 主要声源 | 监测结果 (Leq) |          |
|--------------|-------------|------|------------|----------|
|              |             |      | 昼间 dB(A)   | 夜间 dB(A) |
| 2026. 08. 21 | 厂界东侧外 1 米▲1 | 生产设备 | 58         | 49       |
|              | 厂界南侧外 1 米▲2 | 生产设备 | 56         | 53       |
|              | 厂界西侧外 1 米▲3 | 生产设备 | 55         | 52       |
|              | 厂界北侧外 1 米▲4 | 生产设备 | 56         | 51       |

附: 噪声检测布点图

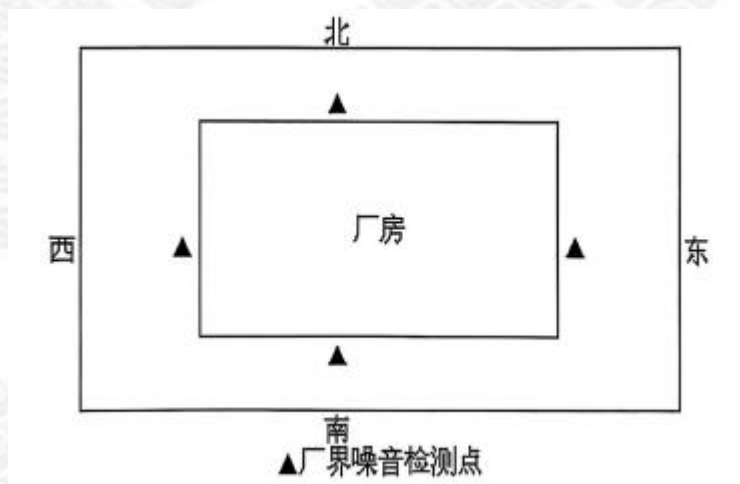

This report shall not be altered, increased or deleted. The results shown in this test report refer only to the sample(s) tested. Without written approval of Hongyi Testing, this test report shall not be copied except in full and published as advertisement Hongyi Physical & Chemical Lab.



# 检测报告



中国认可  
国际互认  
检测  
TESTING  
CNAS L9023

第 7 页 共 7 页

报告编号: HYI20260828A0177

## 注 意 事 项:

1. 报告无“检验报告章”或检验单位公章无效。
2. 未经本实验室书面同意, 不得部分复制本报告。
3. 报告无主检、审核、批准人签字无效。
4. 报告涂改无效。
5. 对检测报告若有异议, 应于收到报告之日起十五日内向检测单位提出, 逾期不予受理。
6. 委托检测仅对来样负责。

地址: 福建省厦门市同安区轻工食品工业区美禾路 99 号

Add: No. 99 Meihe Road, Light Industry Food Industrial Zone, Tongan District, Xiamen City, Fujian Province,

\*\*\*报告结束\*\*\*

This report shall not be altered, increased or deleted. The results shown in this test report refer only to the sample(s) tested. Without written approval of Hongyi Testing, this test report shall not be copied except in full and published as advertisement Hongyi Physical & Chemical Lab.

厦门泓益检测有限公司

Xiamen Hongyi Testing Co., Ltd.

地址: 福建省厦门市同安区轻工食品工业区美禾路 99 号

ADDRESS: No. 99 Meihe Road, Light Industry Food Industrial Zone, Tongan District, Xiamen City, Fujian Province,

邮箱: hongyotest@123.com