



检测报告

Test Report

送检企业: 金拓机械宿迁有限公司

企业地址: 宿迁市宿豫张家港工业园区杨舍路 1 号

项目名称: 无组织废气、噪声

检验类别: 委托检验

厦门泓益检测有限公司

Xiamen Hongyi Testing Technology Co. Ltd

This report shall not be altered, increased or deleted. The results shown in this test report refer only to the sample(s) tested. Without written approval of Hongyi Testing, this test report shall not be copied except in full and published as advertisement Hongyi Physical & Chemical Lab.

厦门泓益检测有限公司

Xiamen Hongyi Testing Co., Ltd.

地址: 福建省厦门市同安区轻工食品工业区美禾路 99 号

ADDRESS: No. 99 Meihe Road, Light Industry Food Industrial Zone, Tongan District, Xiamen City, Fujian Province,

邮箱: hongyotest@123.com



报告编号: HYI20260908A1222

采样日期	2026.09.01、2026.09.02		检测日期	2026.09.01~2026.09.08	
委托联系人	张经理		联系方式	18936940289	
检测内容					
样品类别	检测点位	采样人员	采样方式	样品状态	
无组织废气	厂界	袁斌、周婷	连续	滤膜	
噪声	厂界	袁斌、周婷	/	/	
检测项目	无组织废气：总悬浮颗粒物。 噪声：工业企业厂界环境噪声(昼)。				
检测频次	无组织废气：1次/天。 噪声：昼1次。				
检测依据	无组织废气 总悬浮颗粒物《环境空气总悬浮颗粒物的测定重量法》 HJ1263-2022 噪声 工业企业厂界环境噪声(昼)《工业企业厂界环境噪声排放标准》 GB 12348-2008				

报告编制: 张华伟

报告审核: 杨群

报告签发: 杨群

检测专用章

This report shall not be altered, increased or deleted. The results shown in this test report refer only to the sample(s) tested. Without written approval of Hongyi Testing, this test report shall not be copied except in full and published as advertisement Hongyi Physical & Chemical Lab.

厦门泓益检测有限公司
Xiamen Hongyi Testing Co., Ltd.

地址: 福建省厦门市同安区轻工食品工业区美禾路 99 号

ADDRESS: No. 99 Meihe Road, Light Industry Food Industrial Zone, Tongan District, Xiamen City, Fujian Province,

邮箱: hongyotest@123.com



报告编号: HYI20260908A1222

检测结果:

表 1 无组织废气检测结果

采样日期	检测项目	检测结果					单位
		采样频次	01 (上风向)	02 (下风向)	03 (下风向)	04 (下风向)	
2026. 09. 01	总悬浮颗粒物	第一次	56	70	87	115	ug/m³
	周界外浓度最大值		115				

表 2 噪声检测结果


监测点名称	主要声源及工况说明	检测结果 dB(A)
		昼间
厂界东外 1m	交通	61
厂界南外 1m	环境	56
厂界西外 1m	环境	52
厂界北外 1m	环境	57
气象条件: 2026. 09. 01, 昼间: 天气: 晴, 风速: 2.4m/s。		

This report shall not be altered, increased or deleted. The results shown in this test report refer only to the sample(s) tested. Without written approval of Hongyi Testing, this test report shall not be copied except in full and published as advertisement Hongyi Physical & Chemical Lab.



报告编号: HYI20260908A1222

附图: 检测点位图

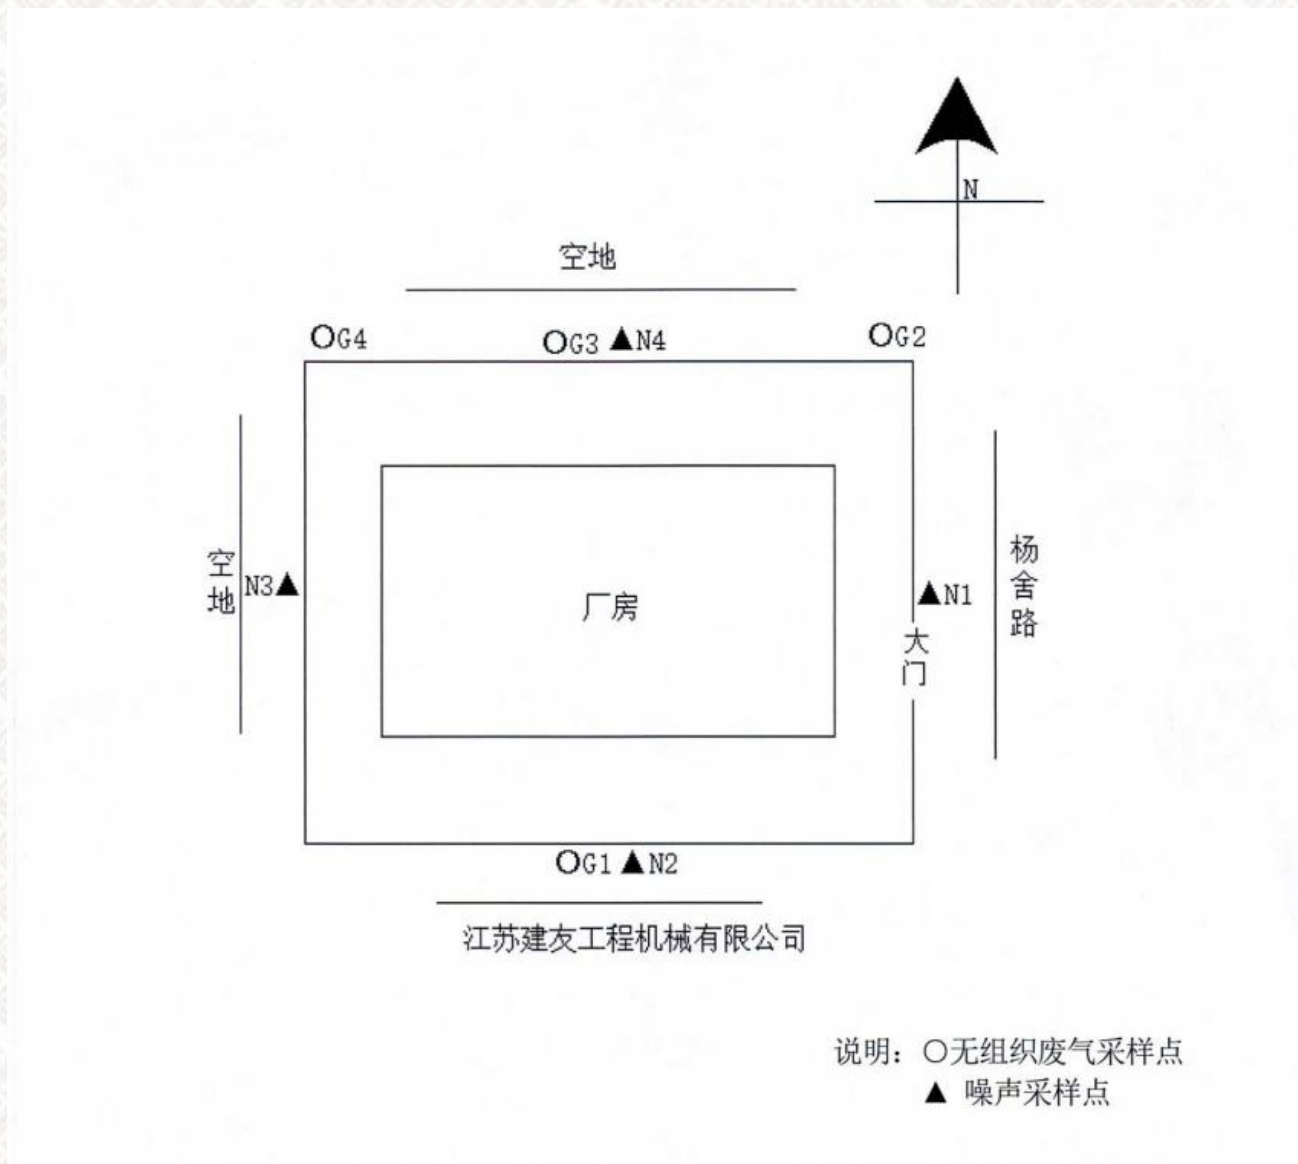

This report shall not be altered, increased or deleted. The results shown in this test report refer only to the sample(s) tested. Without written approval of Hongyi Testing, this test report shall not be copied except in full and published as advertisement Hongyi Physical & Chemical Lab.

厦门泓益检测有限公司

Xiamen Hongyi Testing Co., Ltd.

地址: 福建省厦门市同安区轻工食品工业区美禾路 99 号

ADDRESS: No. 99 Meihe Road, Light Industry Food Industrial Zone, Tongan District, Xiamen City, Fujian Province,

邮箱: hongyotest@123.com



报告编号: HYI20260908A1222

主要检测设备信息:

序号	名称	型号	实验室编号	检校有效期
1	恒温恒湿培养箱	LRHS-150-II	HJD-YQ-F-026	2027-05-01
2	电子分析天平	AUW220D	HJD-YQ-F-012	2027-05-01
3	智能综合采样器	ADS-2062E	HJD-YQ-X-020	2027-05-01
4	智能综合采样器	ADS-2062E	HJD-YQ-X-022	2027-05-01
5	智能综合采样器	ADS-2062E	HJD-YQ-X-024	2027-05-01
6	智能综合采样器	ADS-2062E	HJD-YQ-X-027	2027-05-01
7	手持式气象站	FB-10	HJD-YQ-X-040	2027-05-01
8	崂应 8040 型大流量孔口校准器	崂应 8040 型	HJD-YQ-X-049	2027-05-01
9	多功能声级计	AWA5688	HJD-YQ-X-012	2027-05-01
10	声校准器	AWA6221B	HJD-YQ-X-013	2027-05-01

This report shall not be altered, increased or deleted. The results shown in this test report refer only to the sample(s) tested. Without written approval of Hongyi Testing, this test report shall not be copied except in full and published as advertisement Hongyi Physical & Chemical Lab.

厦门泓益检测有限公司

Xiamen Hongyi Testing Co., Ltd.

地址: 福建省厦门市同安区轻工食品工业区美禾路 99 号

ADDRESS: No. 99 Meihe Road, Light Industry Food Industrial Zone, Tongan District, Xiamen City, Fujian Province,

邮箱: hongyotest@123.com



注 意 事 项:

1. 报告无“检验报告章”或检验单位公章无效。
2. 未经本实验室书面同意,不得部分复制本报告。
3. 报告无主检、审核、批准人签字无效。
4. 报告涂改无效。
5. 对检测报告若有异议,应于收到报告之日起十五日内向检测单位提出,逾期不予受理。
6. 委托检测仅对来样负责。

地址:福建省厦门市同安区轻工食品工业区美禾路 99 号

Add: No. 99 Meihe Road, Light Industry Food Industrial Zone, Tongan District, Xiamen City, Fujian Province,

报告结束

This report shall not be altered, increased or deleted. The results shown in this test report refer only to the sample(s) tested. Without written approval of Hongyi Testing, this test report shall not be copied except in full and published as advertisement Hongyi Physical & Chemical Lab.

厦门泓益检测有限公司

Xiamen Hongyi Testing Co., Ltd.

地址:福建省厦门市同安区轻工食品工业区美禾路 99 号

ADDRESS: No. 99 Meihe Road, Light Industry Food Industrial Zone, Tongan District, Xiamen City, Fujian Province,

邮箱: hongyotest@123.com